



Index

Index

I. Introduction

737 Variants	
Abbreviations	
Legend	

II. General Management

Exterior Inspection	
ILS Approach	
Land at the nearest suitable airport	
Lower Landing Minimum Requirements	
Non-ILS Approach	
Non-Normal Management	
Overweight Landing	
Rejected Takeoff	
RNAV Requirements	
RVSM Requirements	
Quick Turnaround / Brake Cooling	

III. Systems

1 - Airplane General

AIR STAIR Inoperative	
AUTOMATIC UNLOCK or LOCK FAIL	
Cargo Compartment Door Handle Blocked	
CARGO DOOR	
Doors and Hatches	
ELT	
EMERGENCY EXIT LIGHTS NOT ARMED	
ENTRY DOOR or SERVICE DOOR	
EQUIPMENT DOOR	
Exit Unserviceable	
Flight Crew Oxygen	
Lavatory Malfunctions (CL)	
Lavatory Malfunctions (NG)	
Lights	
MID EXIT DOOR (900ER)	
OVERWING DOOR	
PASSENGER OXYGEN ON	
Water System Malfunction	
Window Damage	
Window Damage (Window 3 Not Heated)	
Window Open	

2 - Air Systems

Air Conditioning & Pressurization	
AUTO FAIL or Unscheduled Pressurization Change (CPCS)	
AUTO FAIL or Unscheduled Pressurization Change (DCPCS)	

BLEED TRIP OFF
 CABIN ALTITUDE WARNING or Rapid Depressurization.....
 DUAL BLEED.....
 DUCT OVERHEAT.....
 Duct Pressure Indication Low / High / Split.....
 EQUIPMENT COOLING OFF.....
 HIGH ALTITUDE LANDING INOP.....
 MANUAL MODE.....
 OFF SCHEDULE DESCENT.....
 PACK / PACK TRIP OFF.....
 RAM DOOR FULL OPEN.....
 STANDBY MODE (CPCS).....
 Trim Air Fail.....
 Unpressurized (Ferry) Flight.....
 WING-BODY OVERHEAT.....
 ZONE TEMP.....

3 - Anti-Ice, Rain.....

ENGINE COWL ANTI-ICE.....
 ENGINE COWL VALVE OPEN - TAI INDICATION.....
 ICING.....
 PITOT STATIC HEAT (CL).....
 PROBE HEAT (NG).....
 WINDOW HEAT OFF / OVERHEAT.....
 Windshield Wiper(s) Inoperative.....
 WING ANTI-ICE VALVE OPEN.....

4 - Automatic Flight.....

A/T LIM.....
 AUTOPILOT DISENGAGE.....
 AUTOTHROTTLE DISENGAGE.....
 MCP Faults.....

5 - Communications.....

ACARS Electrical Power Loss.....
 ACARS MU Fail or DU Fail.....
 Antenna Location (CL).....
 Antenna Location (NG).....
 Lightning Strike.....
 Radio Communication Fail.....
 Radio Transmit Continuous (Stuck Microphone Switch).....
 Radio Tuning Panel FAIL / INOP.....
 Service Interphone.....
 Static Dischargers.....

6 - Electrical.....

APU GEN OFF BUS.....
 Battery.....
 Battery Bus Fail.....
 BATTERY DISCHARGE (NG).....

BUS OFF (CL).....

Circuit Breaker Panels.....

Circuit Breakers (CL).....

Circuit Breakers (NG).....

DRIVE.....

ELEC.....

Electrical Failure Diagnosis.....

Electrical Panel.....

Electrical Power Schematic (CL).....

Electrical Power Schematic (NG).....

Electrical Power Source / Alphabetical (CL).....

Electrical Power Source / Alphabetical (NG).....

Electrical Power Source / Bus (CL).....

Electrical Power Source / Bus (NG).....

GENERATOR DRIVE HIGH OIL TEMPERATURE (CL).....

GENERATOR DRIVE LOW OIL PRESSURE (CL).....

Generator Phase Loss.....

GROUND POWER AVAILABLE.....

LOSS OF BOTH ENGINE DRIVEN GENERATORS.....

SOURCE OFF (NG).....

STANDBY POWER OFF.....

TRANSFER BUS OFF (CL).....

TRANSFER BUS OFF (NG).....

TR UNIT.....

7 - Engines, APU

Aborted Engine Start.....

APU (Dispatch with APU inoperative).....

APU Does Not Shutdown.....

APU Does Not Start.....

APU EGT Indication Inoperative (CL).....

APU FAULT.....

APU HIGH OIL TEMPERATURE.....

APU Low Duct Pressure (CL).....

APU LOW OIL PRESSURE.....

APU LOW OIL QUANTITY.....

APU MAINT.....

APU OVERSPEED.....

APU Start with Depleted Battery.....

EEC.....

EEC ALTERNATE MODE.....

Engine Bird Strike.....

ENGINE CONTROL.....

Engine Exceedances.....

Engine Failure Diagnosis.....

Engine Failure or Shutdown.....

Engine High Oil Temperature.....

Engine Ignition Inoperative.....

Engine Indicating (CL).....

Engine Indicating (NG).....

Engine In-Flight Start.....

Engine Limit or Surge or Stall.....

ENGINE LOW OIL PRESSURE.....

Engine Low Oil Quantity.....

ENGINE OIL FILTER BYPASS.....

Engine Start Problems.....	
Engine Thrust Lever Stuck	
High Engine Vibration.....	
Loss Of Thrust On Both Engines	
LOW IDLE (CL)	
One Engine Inoperative Landing	
PMC INOPERATIVE (CL).....	
REVERSER	
REVERSER UNLOCKED.....	
START VALVE OPEN.....	
Volcanic Ash	

8 - Fire Protection.....

APU DETECTION INOPERATIVE.....	
APU FIRE.....	
CARGO FIRE.....	
CARGO FIRE DETECTOR FAULT	
ENGINE FIRE or Engine Severe Damage or Separation.....	
ENGINE FIRE / OVERHEAT DETECTOR FAULT.....	
ENGINE OVERHEAT.....	
Engine Tailpipe Fire	
LAVATORY SMOKE	
Smoke, Fire or Fumes	
Smoke or Fumes Removal	
WHEEL WELL FIRE.....	

9 - Flight Controls

All Flaps Up Landing	
Alternate Flaps Operation.....	
AUTO SLAT FAIL.....	
Elevator Tab Limit Cycle Oscillation (NG).....	
Elevator Tab Vibration.....	
FEEL DIFFERENTIAL PRESSURE.....	
FLAP LOAD RELIEF	
FLIGHT CONTROL LOW PRESSURE.....	
Flight Controls	
FSEU Fail (NG)	
Jammed or Restricted Flight Controls.....	
LEADING EDGE FLAPS TRANSIT	
MACH TRIM FAIL	
Runaway Flaps	
Runaway Stabilizer.....	
SPEED BRAKE (CL)	
SPEED BRAKE DO NOT ARM.....	
SPEEDBRAKES EXTENDED (NG).....	
SPEED TRIM FAIL.....	
STABILIZER OUT OF TRIM.....	
Stabilizer Trim Inoperative.....	
STANDBY RUDDER ON.....	
Trailing Edge Flap Asymmetry.....	
Trailing Edge Flap Disagree	
Trailing Edge Flaps Up Landing.....	
Uncommanded Roll (CL).....	

Upset Recovery
Winglets
YAW DAMPER.....

10 - Flight Instruments, Displays

ADC Fail (CL).....
ADIRU Fail (NG).....
Airspeed Unreliable
Alpha Callup Codes.....
ALT DISAGREE (NG).....
AOA DISAGREE (NG).....
CDS MAINT - CDS FAULT (NG)
Clock Display Fail.....
Display Failure (NG).....
Display Failure (CL).....
DISPLAY SOURCE (NG)
DISPLAYS CONTROL PANEL (NG)
FLIGHT RECORDER OFF
IAS DISAGREE (NG)
IAS INVALID ENTRY.....
ISFD.....
Radio Altimeter Fail
RMI Indication with Heading Inoperative.....
Round Dial Instrument Flags (CL) (non-EFIS)
SG FAIL (CL)

11 - Flight Management, Navigation

(M)CDU Fail
DAA Fail (CL)
FMC / CDU ALERTING MESSAGE.....
FMC DISAGREE / FMC DISAGREE - VERTICAL
FMC FAIL.....
GLS (NG)
GPS (NG).....
ILS (NG).....
INSTRUMENT SWITCH.....
IRS
IRS ALIGN
IRS DC FAIL
IRS FAULT.....
IRS ON DC.....
ISDU
Magnetic Variation.....
UNABLE REQD NAV PERF - RNP.....
VHF Navigation Transfer
Wind Indication.....

12 - Fuel.....

CONFIG (NG)
CROSSFEED SELECTOR INOPERATIVE
Engine Fuel Leak
FUEL FILTER BYPASS.....

Fuel Imbalance Diagnosis	
Fueling Station	
Fuel Panel	
FUEL PUMP LOW PRESSURE	
Fuel Quantity Indicat(or)(ion) Inoperative	
Fuel Tank Scavenge System	
Fuel Temperature Low	
FUEL VALVE CLOSED (CL)	
IMBAL (NG)	
Inadvertent Transfer of Fuel into Center Tank (CL)	
LOW (NG)	
Minimum Fuel Operation (CL)	
Nitrogen Generation System	
Refueling or Defueling	

13 - Hydraulics.....

Hydraulic Pump Does Not Engage / Disengage	
HYDRAULIC PUMP OVERHEAT	
HYDRAULIC PUMP LOW PRESSURE	
STANDBY HYDRAULIC LOW QUANTITY	
Hydraulic System	
Hydraulic System Indicating	
HYDRAULIC SYSTEM LOW QUANTITY	
LOSS OF SYSTEM A	
LOSS OF SYSTEM B	
MANUAL REVERSION or LOSS OF SYSTEM A AND SYSTEM B	
STANDBY HYDRAULIC LOW PRESSURE	

14 - Landing Gear

ANTISKID INOPERATIVE	
AUTO BRAKE DISARM	
Brake Pressure Indicator Excessive PSI (CL)	
Brake Pressure Indicator Zero PSI	
Brake System	
BRAKE TEMPERATURE	
GEAR DISAGREE	
Landing Gear - Crosswind Landing	
Landing Gear Lever Jammed in the Up Position	
Landing Gear Lever Will Not Move Up After Takeoff	
Landing Gear Transfer Unit	
Manual Gear Extension	
Parking Brake Warning Red Light Does Not Illuminate	
Partial or All Gear Up Landing	
Tire Burst On Takeoff	

15 - Warning Systems

ALTITUDE ALERT	
Aural Warning(s) Fail	
Ground Crew Call Horn	
GROUND PROXIMITY INOPERATIVE	
LANDING CONFIGURATION	
MASTER CAUTION Annunciator Fail	

Overspeed.....

PSEU (NG).....

SPSEU (NG)

Stall Warning.....

Tail Strike

TAKEOFF CONFIGURATION

TCAS Invalid RA

WARNING HORN/LIGHT - CABIN ALTITUDE OR TAKEOFF CONFIGURATION.....

IV. Addenda

Bomb.....

Ditching

Emergency Descent

Emergency Landing Passenger Announcement

Evacuation

Fire Drill.....

Hijacking

Laser Illumination

Rules of Thumb.....



mccPILOTLOG is the ultimate logbook software for professional airline pilots
 automatic flight schedule import interface for more than 300 airlines worldwide
 mobile companion app for iPhone, Android, Windows Mobile, Blackberry

visit www.mccpilotlog.net